 


This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

Caution: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



This symbol indicates important instructions accompanying the product.



This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.

## WARNING

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

The apparatus must not be exposed to dripping or splashing. Objects filled with liquids, such vases or drinking glasses, must never be placed on the apparatus.

## IMPORTANT SAFETY INSTRUCTIONS


1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the carts/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel.



14. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, do not operate normally, or has been dropped.

15. If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984 (Section 54 of Canadian Electrical Code, Part 1) provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrode. See following example.

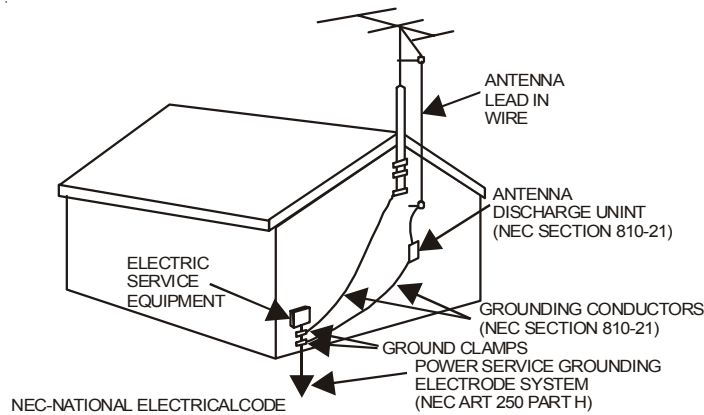





---

# Contents

    Overview	4
Remote control	5
Basic operation	7
External connection	8
DVD Player Basics	9
Using the Menu System	10
TV Function Menu	10
Menu basic operation	10
Using the PICTURE menu	10
Using the SOUND menu	10
Using the TIMER menu	11
Using the FUNCTION menu	11
Using the TUNING menu	12
DVD Menu System	13
DVD Menu Basic Operation	13
LANGUAGE SETUP	13
SCREEN SETUP	15
CUSTOM SETUP	17
DVD Operations	19
Picture defects and countermeasures (AIR reception)	20
Troubleshooting	21
For TV	21
For DVD Player	22
DISC PROTECTION	22
Specifications and accessories	23

# Overview

1. Power Indicator
2. Remote Sensor
3. Input Button
4. Volume Down Button
5. Volume Up Button
6. Channel Down Button
7. Channel Up Button
8. Power Button
9. Open/Close Button
10. Play/Pause Button
11. Stop Button
12. Front Video Input Jack
13. Front Audio Input Jack
14. Headphone Jack
15. VID1 Video Input Jack
16. Antenna Jack
17. VID1 Audio Input (L) Jack
18. VID1 Audio Input (R) Jack

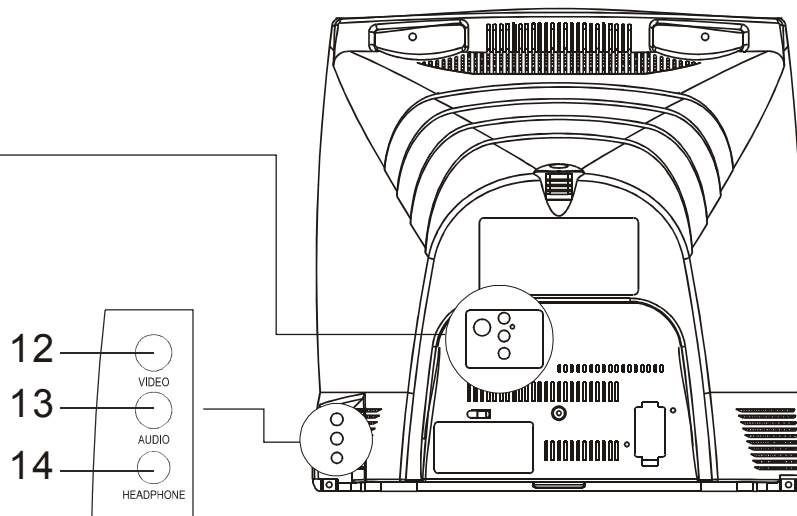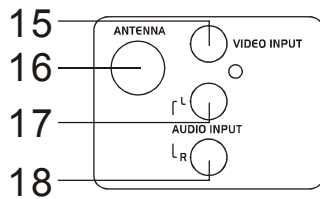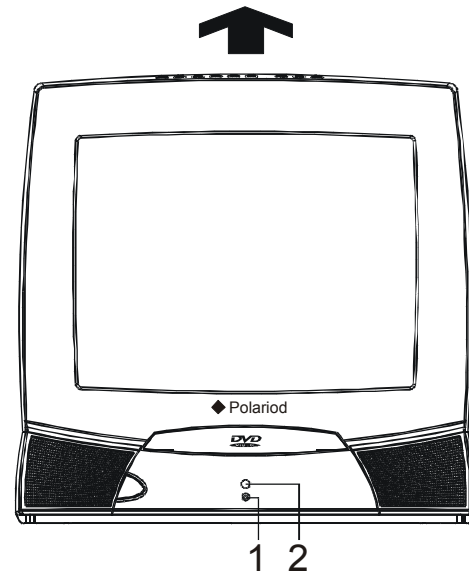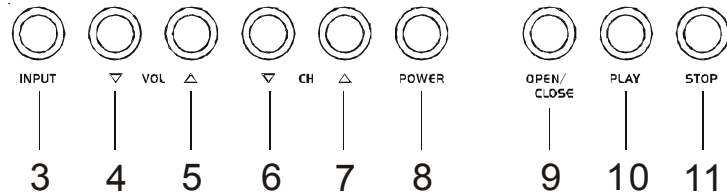


**Inserting batteries:** Remove the cover, insert 2 AAA size batteries with the polarities as marked inside the battery compartment and then replace the lid.

**Note:**

 1. One set of batteries will last for approximately one year under normal use.
2. If the remote control is not to be used for a long period of time, remove the batteries or it may result in battery acid leakage.

## The Buttons On the Remote control

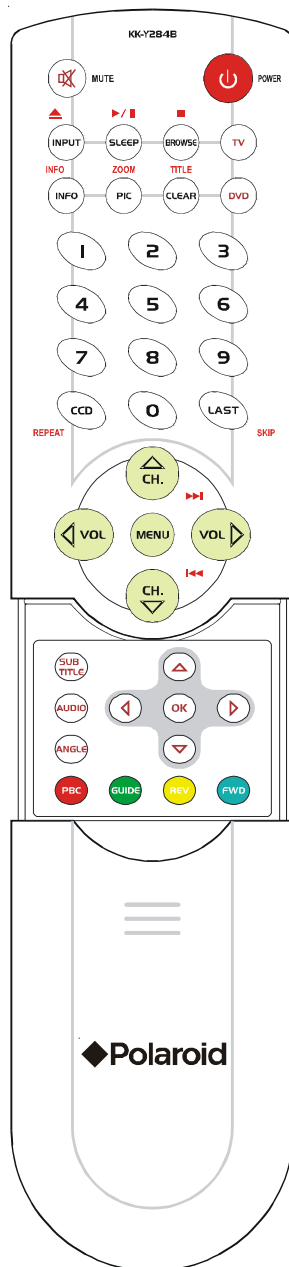

### TV Function Buttons

**INPUT** Press the button to switch between AV input and RF (antenna) input.

**TV** Press the button to select the remote control in the TV mode.

**Mute** Press the button to minimize the volume level. Press again to restore the original volume level.

**BROWSE** "Browse" feature. Press the button twice to start the channel scanning. Press again to stop at the current scanned channel.

**INFO** Press the button to display the channel information

**PIC** Press the button to display the picture preset.

**SLEEP** Press the button to set the sleep timer.

**CCD** Press the button to turn on and off the closed caption.

**Go Back** Press the button to return the previous channel. If the unit is in menu mode, press the Go Back button to return previous menu screen.

**POWER** Press the button to turn on and turn off the TV.

**VOL (left and right) buttons** Press the button to increase or decrease the TV volume.

**CH. (up and down) buttons** Press the button to scan up or down the current channel list. Press once to select the channel up or down, press and hold to select your desired channel.

**MENU** Displays the TV's Main menu. (See page 10 for details.)

**CLEAR** Press the button to hide menu or display from the screen and then returns to original TV screen. For the menu with digit input, press the CLEAR button to clear the last number entered.

**0-9 (Number buttons)** Press the buttons to select directly the channel numbers and the time setting by using the remote control.

To enter a two-digit channel, press the two digit buttons. To enter a three-digit channel, press and hold the first digit for two seconds until "--" appears to the first digit and then enter the other two digits.

Example: To tune in channel 123.

Please and hold No 1, press No 2, then No 3.

**Other buttons:** The buttons on the remote control other than listed above are not available for TV function.

## DVD Function Buttons

**DVD** Press the DVD button to select DVD mode.

**POWER** Press the button to switch on and switch off the power.

**VOL (left and right) buttons** Press the buttons to increase or decrease the TV volume.

**MUTE** Press the button to minimize the volume level. Press again to restore the original volume level.

**OPEN/CLOSE** ▲ Press the button to open or close the DVD disc tray.

**PLAY/PAUSE** ▶/⏸ Press the button to start or pause the disc playback. Press the button again to resume playback.

**STOP** ■ Press the button to stop the disc playback.

**INFO** Press the button to display the title, chapter and elapsed time information during disc playback. Press again to hide the display information.

**ZOOM** Press the button to zoom in or zoom out the picture during DVD disc playback.

**TITLE** Press the TITLE button to display TITLE menu during DVD disc playback.

**REPEAT** Press the button to repeat a chapter or title on DVD or a track on Audio CDs.

**SKIP** Press the button to skip to the specified chapter/track or time. See page 16 for details.

▶▶ Press the button to advance to the next chapter or track.

◀◀ Press the button to reverse to the preceding chapter or track.

**MENU** Press the button to display the menu and other options on the current disc.

(only if the information is available on the loaded disc)

**SUBTITLE** Press the button to select a subtitle language.(only if the loaded disc is encoded with multiple Subtitle languages)

**AUDIO** Press the button to select audio soundtrack language. (only if the loaded disc is encoded with multiple languages)

**ANGLE** Press the button to select the camera angle of multiple screen shot. (only if the loaded disc is encoded with multiple camera angle)

**PBC** Press the button to turn the navigation OFF and the disc playback starts directly without entering the menu. Press again to turn the navigation ON.

**GUIDE** Press the button to display the DVD setup menu when the DVD player is in stop mode.

**REV** Press the button to search backward through the disc during disc playback. Press repeatedly to increase the searching speed.

**FWD** Press the button to search forward through the disc during disc playback. Press and hold the button to increase the searching speed.

**Arrow buttons**(up, down, left, right) Press the buttons to move through the on-screen menu system.

**OK button** Press the button to select and highlight the desired item on the screen display.

**Other buttons:** The buttons on the remote control other than listed above are not available for DVD function.

### **Connect to power**

Connect the power supply cord to a 120V AC convenience outlet. Disconnect the power if the unit is not to be used for a long period of time.

### **Power on/off**

Turn on the unit by pressing the POWER button on the main unit (or the POWER button on the remote control).

### **Energy saving feature**

The TV will automatically switch to standby mode if no any signal received after 15 minutes. Press the POWER button on the main unit (or on the remote control) to turn on the power.

### **Change channels**

Change the TV channel by pressing the CH/ button on the main unit (or the PROG/ button on the remote control). When the ANTENNA is in "AIR" mode, enter two digits by using the remote control to select the desired TV channel.

For example, press No 0 and No 2 to select channel 2. When the ANTENNA is in "CABLE" mode, enter three digits to select the desired TV channel. For example, press and hold No 1 for 2 seconds to display "1-", then enter the other two digits.


# External Connection

---


The unit can be simultaneously connected to VCR, LD player, VCD player, video camera and other audio-video equipments for the better quality picture.

For the monaural devices, connect audio lead to Audio (L) jack.

1. Under AV1 connection, connect the external equipment to the back panel of the unit as shown in the figure below:

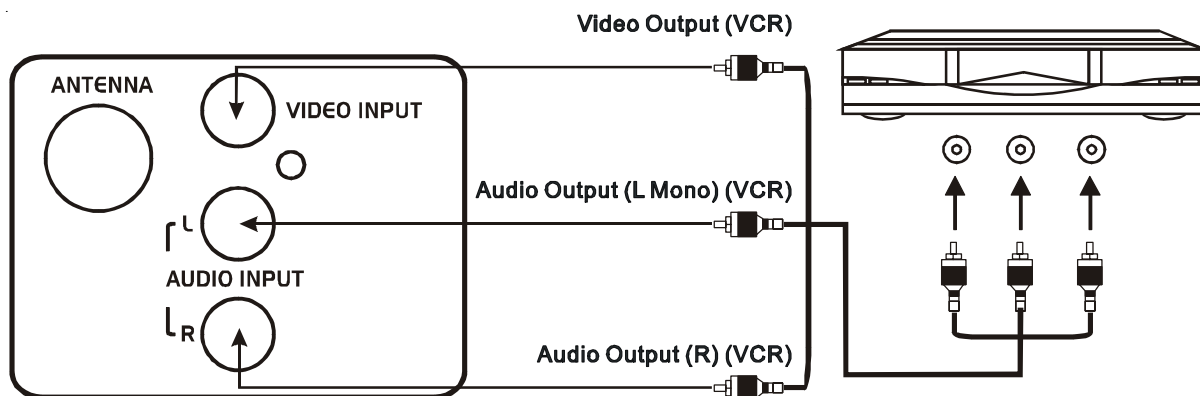

2. Under AV3 mode, connect the external equipment to the side panel of the unit as shown in the figure below:

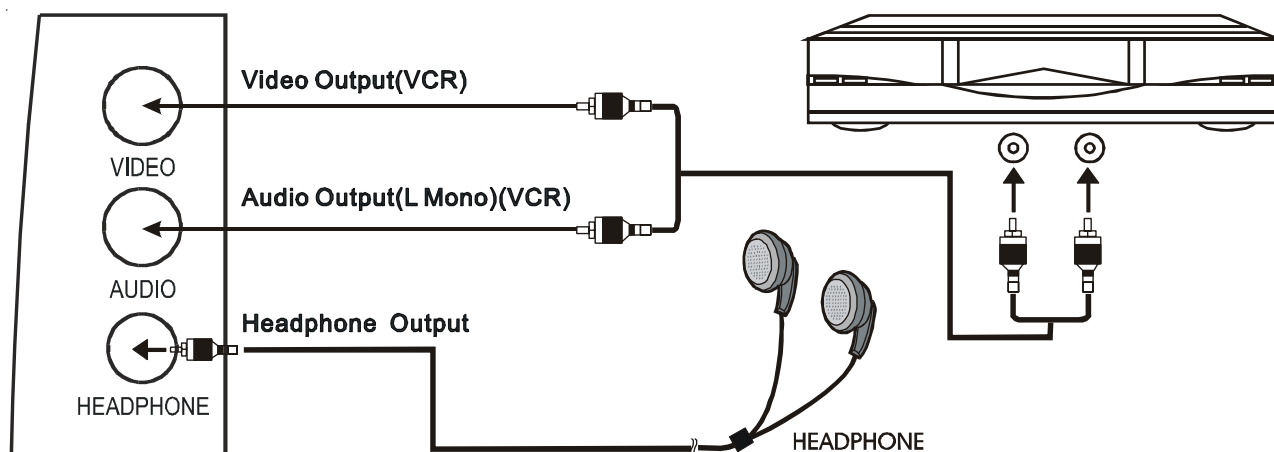

## DVD Player Basics

If you turn on the DVD player for the first time, press the GUIDE button to set up the DVD menu system when the unit is in the stop mode.

## Regional coding

Both the DVD player and the discs are coded by region. These regional codes must be matched accordingly for the loaded disc or it may fail to play back. The regional code for this unit is Region 1.

## Loading and Playing Discs

DVD disc, audio CD disc and recorded CD-R/CD-RW discs are playable for this DVD player.

Before the playback, make sure the discs are compatible with this DVD player. To load and play a disc:

1. Press the DVD button on the remote control or INPUT button on the main unit (or on the remote control) to turn on the DVD player.
2. Press the OPEN/CLOSE button on the main unit (or on the remote control) to open the disc tray.
3. Place a disc gently into the tray with the disc's label facing up.
4. Press the OPEN/CLOSE button on the main unit (or on the remote control) to close the disc tray.
5. Press the PLAY button on the main unit (or on the remote control) to start the disc playback and display the disc menu. When the disc menu appears, select your desired option and press the OK button on the remote control to start playback.

The DVD player reads the disc's table of contents, and then one of two things happens depending on how the disc was programmed:

- . The disc starts playing.
- . The disc menu appears on the screen. One of the options will start disc play. Highlight that option and press OK on the remote control.

## TV Function Menu

### Menu basic operation

1. Press the MENU button on the main unit (or on the remote control) to enter menu mode. Press the VOL ◀/▶ button on the main unit ( or◀/▶ button on the remote control) to select the icon.
2. Press CH ▲/▼ button on the main unit (or ▲/▼ button on the remote control) to select your desired mode.
3. Press the VOL ◀/▶ button on the main unit (or◀/▶ button on the remote control) to change the setting.
4. Press MENU button on the main unit (or OK button on the remote control) to return the original screen. To exit directly the menu operation, press the MENU button on the remote control.

**Note:** Make sure that the remote control is in the TV mode.

### Using the PICTURE menu

The PICTURE menu is used to make an adjustment to the picture settings and customize the picture mode based on the current channel type.

PICTURE	
CONTRAST	1
BRIGHTNESS	18
COLOR	50
SHARPNESS	50
TINT	0
COLOR TEMP	NORMAL

CONTRAST	To adjust the CONTRAST of the picture
BRIGHTNESS	To adjust the BRIGHTNESS of the picture.
COLOR	To adjust the COLOR intensity or saturation of the picture.
SHARPNESS	To adjust the SHARPNESS of the picture.
TINT	To adjust the TINT balance of the picture.
COLOR TEMP	Three default color adjustment: Cold(more on blue picture color);Normal;Warm (more on red picture color).

### Using the SOUND menu

The SOUND menu offers enhance audio options such as listening to second audio program(SAP).

SOUND	
PRESET	USER
BASS	50
TREBLE	50
BALANCE	0
SURROUND	OFF

PRESET	Four preset audio setting.(USER/ SPEECH/THEATER/MUSIC)
BASS	To adjust the BASS effect of the sound.
TREBLE	To adjust the TREBLE effect of the sound.
BALANCE	To adjust the sound balance of the speaker sound.
SURROUND	To turn on or turn off the surround effect of the sound.

## Using the TIMER menu

The TIMER menu is used to set the sleep timer.

TIMER	
SLEEP TIMER	120

SLEEP TIMER	To turn off the unit automatically on your desired time. Press the right arrow to add 10 minutes to the clock(up to two hours).
-------------	--

## Using the FUNCTION menu

The FUNCTION menu is used to set up the TV function.

FUNCTION	
LANGUAGE	ENGLISH
BACKGROUND	ON
BLACK STRETCH	OFF
NOISE REDUCE	OFF
CLOSE CAPTION	CC1
CC ON MUTE	

LANGUAGE	To select the menu display language. (Three languages available:English, French and Spanish)
BACK GROUND	To turn on or turn off the background function when no any signal received.
BLACK STRETCH	To turn on or turn off the black stretch function.
NOISE REDUCE	To turn on or turn off the noise reduce function.
CLOSE CAPION	Eight closed caption modes, including four text modes.
CC ON MUTE	To display close caption automatically when the MUTE button is pressed with the unit turned on.


Note: The BACK GROUND function is not available when the unit is in RF input mode.

# Using the Menu System

---

## Using the TUNING menu

The TUNING menu is used to tune the channel.

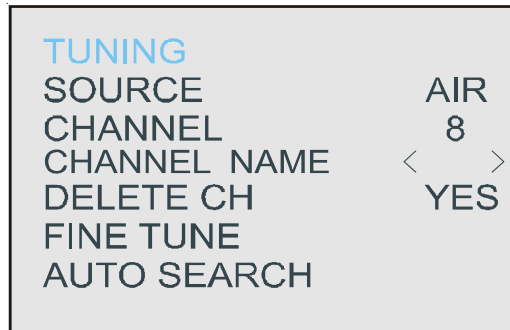

- |              |  |
|--------------|--|
| SOURCE       | To select AIR source to receive radio broadcast frequency. To select CABLE source to receive CATV channel.   |
| CHANNEL      | Use the VOL ◀/ ▶ button on the remote (or the VOL ▲/ ▼ button on the front of the TV) to scroll through the channels available. You can enter the channel number directly using the number buttons.  |
| CHANNEL NAME | To press the VOL ◀/ ▶ button on the main unit (or the ◀/ ▶ button on the remote control) to select the TV channel. Allows you to name a channel. The channels you can name are only from 2 to 11 in AIR. Use the VOL ◀/ ▶ button on the front of the TV (or VOL ◀/ ▶ button on the remote control) to enter a five-character label for each channel. |
| DELETE CH    | To select YES to skip the channel above. To select NO to enter the channel above.  |
| FINE TUNE    | To fine tune the scanned channel.  |
| AUTO SEARCH  | To search the TV channel automatically and the scanned channels are stored.  |

## DVD Menu System


The DVD player setup system sets up the features of the DVD player in stop mode.

### DVD Menu Basic Operation

1. Press the **■** button to stop the DVD playback and make sure that the remote control is in the DVD mode.
2. Press the **GUIDE** button on the remote control, the **SETUP MENU (main)** displays.
3. Press the **◀/▶** button to highlight your desired item, select the **OK** button to enter submenu.
4. Press the **◀/▶** button to move the pointer. Select the **▲/▼** button to your desired option and press the **OK** button to complete the setup.
5. Press the **SKIP** button to locate a specific chapter/ track or time during DVD playback.  
Press the **◀/▶** buttons (or digit buttons) to select your desired chapter or track and then press the **OK** button to start the disc playback.  
Press the **SKIP** button twice, the playback time displays. Take note your desired playback time setting cannot exceed the total playback time of the chapter. During VCD/AUDIO CD playback, press the **SKIP** button to select a specific time. (Only the PBC is off during VCD playback.)
6. To end the setup, press the **GUIDE** button.  
In the **SETUP MENU**, you may choose any of the following options :


## LANGUAGE SETUP

The **LANGUAGE SETUP** is used to set the DVD language for **OSD, MENU, AUDIO AND SUBTITLE**.

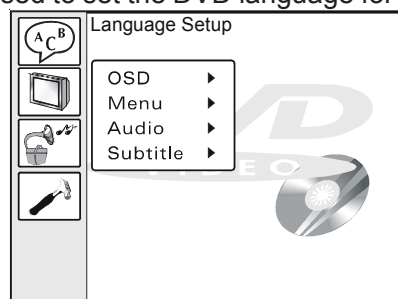

### 1 OSD(On Screen Display)

Select to display the language for OSD.

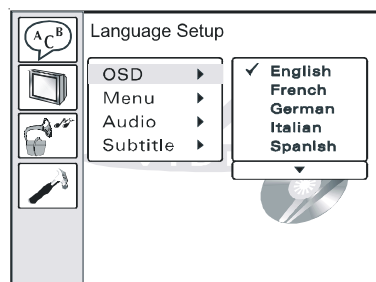


**ENGLISH:** On-screen display (OSD) text appears in English.

**SPANISH:** OSD text appears in SPANISH.

**FRENCH:** OSD text appears in FRENCH.

## 2 MENU


Select to display the language for DVD menu. This DVD player provides ENGLISH, FRENCH, SPANISH etc. as the film's menu language options. For example, if you normally want to see disc menus in English, select English.

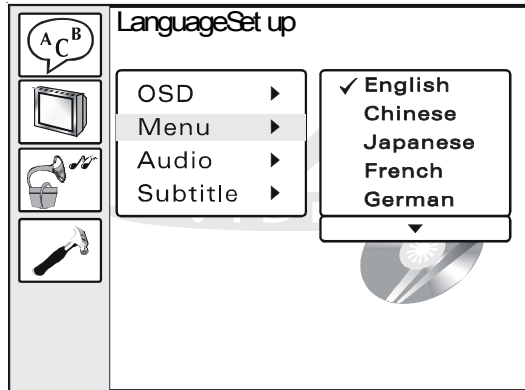

## 3 AUDIO


To select the language for audio. If multiple languages are programmed on the disc, the setting you choose here determines the language you hear.

 This DVD provides ENGLISH, FRENCH, SPANISH etc. as the built-in disc dubbing language options.

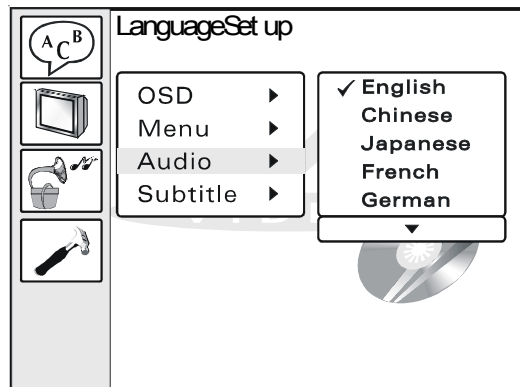


## 4 SUBTITLE

To select the subtitling language. This DVD player provides ENGLISH, FRENCH, SPANISH etc. as the built-in subtitle language. When a DVD is played, the user may hide the subtitle or choose any of them as the preset subtitle language.

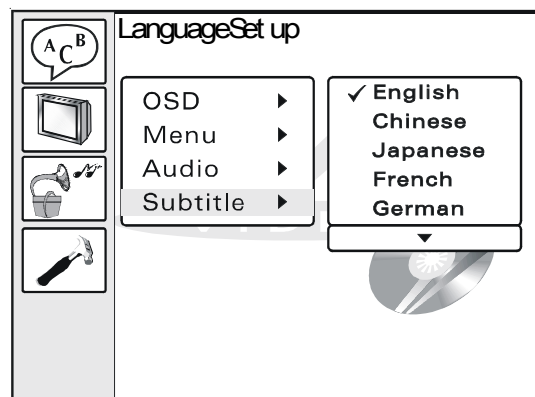


## SCREEN SETUP

This option is used to setup the DVD video output function.

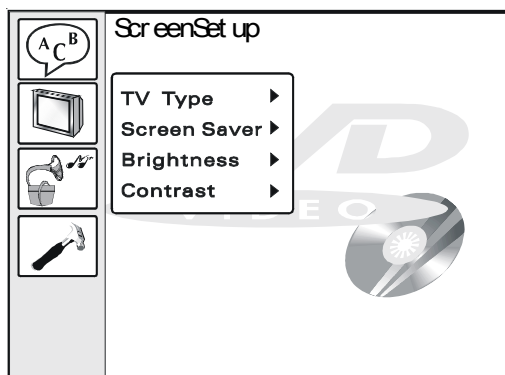

### 1 TV TYPE

 To select the playback picture size to the TV aspect ratio.

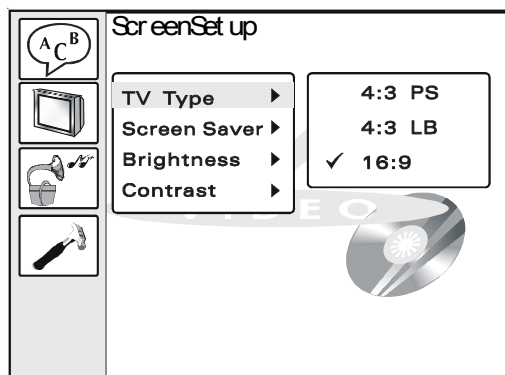

**4:3 PS:** To display 16:9 source on normal 4:3 aspect ratio TV display as pan and scan (PS). The edges are cut off in this mode.

**4:3 LB:** To display 16:9 source on normal 4:3 TV display as letter box (LB). When a DVD providing multiple angles is used, the user may select a particular angle.


**WIDE:** To display 16:9 source on special 16:9 wide screen TV.

TV -SCREEN FILL FORMAT	4:3			16:9
	NORMAL	FULL VIEW	MAILBOX	WIDE SCREEN
<b>4:3</b> 				
<b>16:9</b> 				

## 2 SCREEN SAVER


The screen saver appears after the DVD player is turned on or in the stop mode.

ON:screen saver is on.  
OFF:screen saver is off.

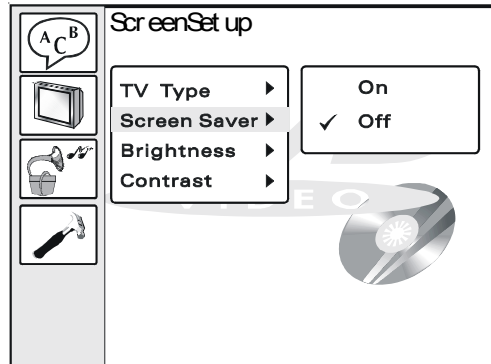


## 3 BRIGHTNESS

To select the BRIGHTNESS setting for DVD video output.

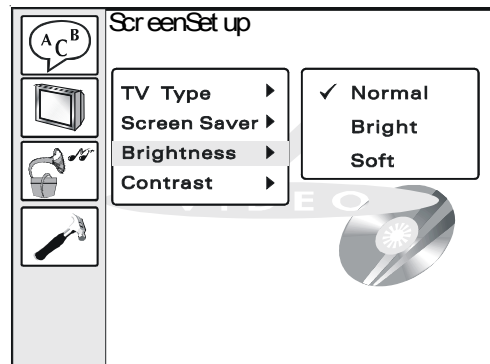

## 4 CONTRAST

To select the CONTRAST setting for DVD video output.

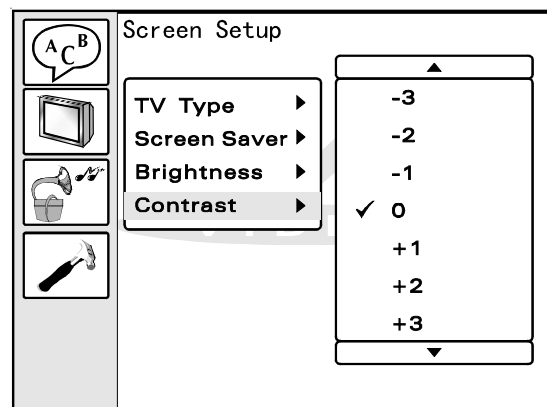


# DVD Menu System

---


## CUSTOM SETUP

Custom setup include angle mark and default. Preset values are essential to a DVD player. The user may change these items as desired.

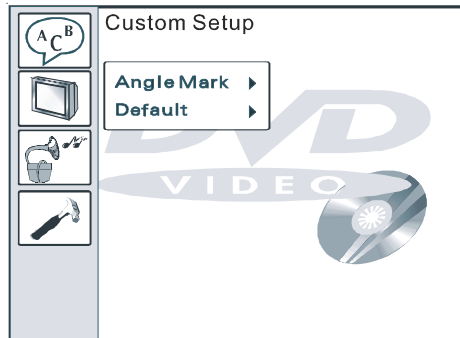

### 1 ANGLE MARK

 Select to setup the angle mark function.

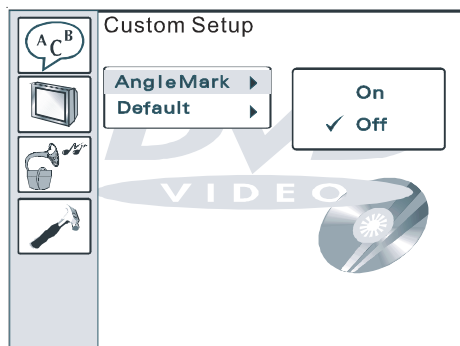


ON: Angle mark appears on the screen.

OFF: Angle mark disappears on the screen.

## 2 DEFAULTS

Defaults set all the selectable options in all the menus to factory settings and should only be used as a last resort.

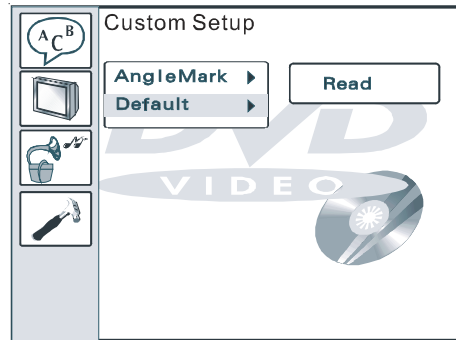

**CAUTION:** If you choose Defaults option, all selections you have made in the Setup menus must be reset. Before you use this option, ensure this is the only way you can get the DVD to operate again. You may wish to review and record your present settings before choosing to reset all your options back to factory settings.

## EXIT

Press to exit the setup menu. You can press the guide button to exit the setup menu directly.

# DVD Operations

---

## Playing Discs

**Note:** Before disc playback, select the remote control in DVD mode.

## Playing DVDs

For basic information about disc playback, see page 9 for details on DVD disc menu.

## Using a Disc Menu

Some discs have an on-screen menu that is separate from the DVD player's menus. The disc menu might only contain a list of the titles and chapters or it may allow you to change features such as language and playback settings. The content and the operation of disc menu varies from disc to disc.

1. While the disc is playing, press MENU button on the remote control. The disc menu appears.
2. Press the  $\Delta/\nabla$  and the  $\leftarrow/\rightarrow$  button to highlight the desired section or item. Select the OK button on the remote control to confirm the selection.
3. Press MENU button on the remote control to resume playback.

**Tip and Note:** Many discs skip the disc menu and start playing automatically. Press the MENU button on the remote control during the disc playback to access the disc menu. Any settings you change on the disc menu only override the settings in the DVD player's menu temporarily. Default settings are set up in the DVD player's menu system. To change the default settings, go to DVD MENU System.

## Playing Audio CDs

This DVD player can be used as an audio CD player. This section explains how to play audio CDs in your DVD player and how to use the player's features.

## Scan Disc

To scan through the disc during disc playback.

1. Press the REVERSE or the FORWARD button on the remote control during disc playback.
2. Press the button again to scan at a faster speed.
3. Press the PLAY button to return normal playback.

## Track Advance or Reverse

1. Press the  $\blacktriangleright\blacktriangleright$  or  $\blacktriangleleft\blacktriangleleft$  buttons on the remote control during disc playback.
2. Each time you press the button, the CD advances (or reverses) one track.

## Pause

1. Press the PAUSE button to pause the disc playback.
2. Press the PLAY button to resume playback.

# Picture defects and countermeasures(VHF/UHF reception)

---

The most common types of television interference are as follows:

## **SNOWY PICTURE**

Snowy picture is usually due to weak signal. Adjust antenna or install an antenna amplifier.



## **DOUBLE IMAGE OR GHOSTS**

Double images are usually caused by reflections from tall buildings. Adjust the direction of the antenna or raise it.



## **RADIO WAVE INTERFERENCE**

Wavy patterns are moving on the screen, which are usually caused by nearby radio transmitters or short-wave receiving equipment.



## **HIGH TEMPERATURE ELECTROTHERMAL INTERFERENCE**

Diagonal or herringbone patterns appear on the screen or part of picture is missing. This is probably caused by high temperature electrothermal equipment in a nearby hospital.



**NOTE:** If one of these symptoms appears on the screen when the cable from a company is connected, this may be due to the local cable company broadcast.

# Troubleshooting

---

Most problems you encounter with your TV you can correct by consulting the Troubleshooting list that follows.

If the trouble still persists, contact the service center.

## For TV

Problems	Check
No picture or sound.	Check if the power supply is plugged in. Check if the power switch is in "on" position.
Picture is OK, no sound.	Check if the volume control is set to the minimum or mute position.
Remote control doesn't work.	Check if the power switch is in "on" position. Check if the batteries are out of use or not connected well. To make sure that there is no strong light strikes the sensor window of remote control unit. Check there are no obstacles before the sensor window of remote control unit.
No TV signal.	Check if the TV/AV button is not set to TV status. Check if the antenna is well connected. Check if you operated in right way.
No external video signal.	Check if you operated in right way. Check if the TV/AV button is set to AV position.
Picture lacks color or picture too dark.	Check color, bright and contrast controls are correctly adjusted.
All channels lose color intermittently.	Check if the antenna is broken. Check if the antenna is disconnected. Check if the antenna is damaged.
Poor reception, loss of color with certain channels.	Check if channels are correctly tuned (see "Fine tuning") .
Diagonal stripes appear on picture.	The receiver may be affected by interference (e.g. from nearby radio broadcasting transmitter or from another TV receiver).
Picture has "snow".	Check if the antenna is broken. Check if the antenna is disconnected. Check if the antenna is damaged.
Ghost images appear.	Check if the antenna direction has been changed by storm or strong wind, etc. (because ghost images are caused by the arrival at the antenna of both the signal which has traveled directly from the transmitter and the signal which has been reflected from a hill or a large building. So that the direction of the antenna should be chosen for minimized ghost.)

## **For DVD Player**

### **Disc does not play**

Check to make sure the disc is loaded correctly (label side is face up on the disc tray).

Check that disc is clean from dirt, dust, finger prints, smudges.

Check to ensure disc is within the guides on the tray.

Make sure disc is for use in region 1.

### **Picture dividing**

Make sure the disc is clean and no any scratch on it.

For the player is controlled by micro-computer, if encountering problem, switch off the power first, and switch on again in a few second, by then if no mistake notice is displayed, the player could work well.

## **DISC PROTECTION**

### **Protection**

When loading or removing the discs, always hold them by the center and edge.

Do not stick or write anything on the surface. Protect discs against any fingerprint.

### **Cleaning**

Wipe the discs from time to time using a soft cloth. Always wipe from the center toward the edge.

### **Storage**

Never warp the discs. During non- use periods, store them in their case, which should be kept vertically.

Do not expose discs to high temperature, dampness or extremely low temperature, or else it may cause damage to the discs.

Do not expose discs to direct sunlight.

## Specification and accessories

---

### Specifications

<b>Model</b>	<b>TDM-1311</b>
<b>Color System</b>	NTSC
<b>Power Supply</b>	~120V 60Hz
<b>Power Consumption</b>	85W
<b>Chassis Construction</b>	IC Solid State
<b>Picture Tube</b>	13"
<b>Audio Output</b>	2 ×1.5 W
<b>Loudspeaker</b>	16Ω/3W
<b>Tuner Type</b>	181 Channels, Quarts PLL Frequency synthesized
<b>Remote Control</b>	Infrared, Direct Access 39 Keys, 2 size AAA Batteries
<b>Channel Coverage</b>	VHF 2-13 UHF 14-69 CATV 1-125
<b>Antenna Input Impedance</b>	75Ω (VHF/UHF/CATV) Coaxial Input
<b>Dimensions</b>	
<b>Weight</b>	28.6 lbs

### Accessories

1. User's Manual
2. Remote control
3. Warranty Card
4. Safety Card
5. 2 size AAA Batteries



# 13" Stereo TV/DVD Player

TDM-1311

